



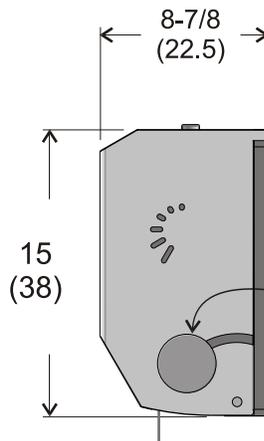

Hands Free Towel Dispenser, Surface mounted

- Code 109-60W:** White epoxy powder finish
Code 109-60S: Stainless steel, no. 4 finish
Code 109-60P: Smoked polycarbonate cover

Overall dimensions in inches, (centimeters in brackets).

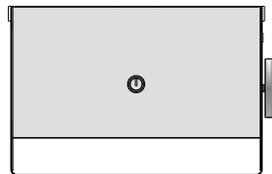

Paper advance wheel for loading paper and alternate feeding of paper.



Specifications

Site location:

- Ideal for high traffic areas.

Dispensing:

- When pulling on the exposed length of towel the touch free dispenser will automatically cut an 11" (27cm) length, leaving a 3" length of towel to grab onto for the next dispensing action.
- Hands free dispenser reduces paper flow, and provides maximum hygiene.
- Designed to dispense jumbo roll towels max. 8" diameter.
- Comes with keyed tumbler lock to reduce pilferage and vandalism. Front loading for easy service and maintenance.

Materials:

Code 109-60W:

- All welded construction of 22 ga. cold rolled steel, in white powder coat finish.

Code 109-60S:

- All welded construction of 22 ga. stainless steel, no. 4 brushed finish .

Code 109-60P:

- Smoked polycarbonate cover.

Shipping Weight:

13.5 lbs. (6 kg). Code 109-60P: 10 lbs (4.5 kg)

Installation:



For unrestricted access, bottom of unit to floor should not exceed 43" (109.2). Mounting screws provided.



Hygienic Solutions at Work

Frost Code 109-60 Loading Instructions

Step 1: Open the unit using key provided



Step 2: Insert jumbo paper towel roll (maximum diameter 8")



Step 3: Slide paper end between outer bar and internal roller



5280 John Lucas Drive
Burlington, ON, Canada
L7L 5Z9

Tel: (905) 332-5700
Fax: (905) 332-7105

www.frostpl.com
info@frostproductsltd.com



Hygienic Solutions at Work

Step 4: Pull paper end further out to provide slack



Step 5: Crease paper along the top of the internal roller with rubber face



Step 6: Provide some pressure against the crease of paper and turn the knob on the outside of the unit clockwise





Hygienic Solutions at Work

Step 7: The paper should be pulled back within the unit by turning the knob and after approximately one full rotation of the knob on the right the paper end will appear at the bottom of the unit.



Step 8: Close the lid and secure with key

